


THE EVOLUTION OF THE WINCH IS HERE

- Automatic
- Fast
- Powerful
- Reliable
- Safe

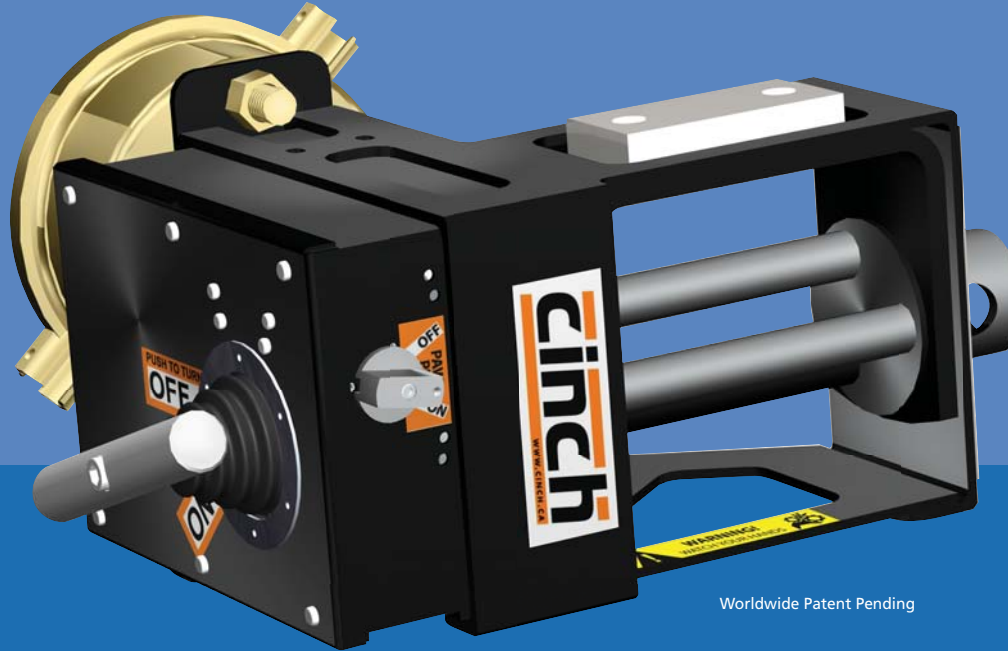

Worldwide Patent Pending

Product specifications

Dimensions:

9.75" x 8" x 10"

Weight:

Adds 25lbs to a standard winch

Case material:

Powder coated aluminum

Minimum operating temperature:

-40 °C / °F

Weather resistance:

Moisture, dust and salt resistant

Air fittings:

DOT and SAE approved one touch fittings

Minimum / maximum pressure ratings:

40 psi to 90 psi dry air

Maximum winch operating speed:

33 teeth per minute

Air supply:

1/2" nylon DOT rated air brake tubing with T-connectors to each unit

Mounting:

Fixed (bolt-on) or sliding brackets available

Winch configurations:

Slotted or 3-Bar

Service brake impact:

An air priority valve shuts off air supply to system in the event of an air leak

Rated tension capability:


At 90 psi the minimum tension is 2000 lbs / 400 ft lbs

Maximum width load strap:

4" maximum width



CINCH IS THE ULTIMATE WINCH

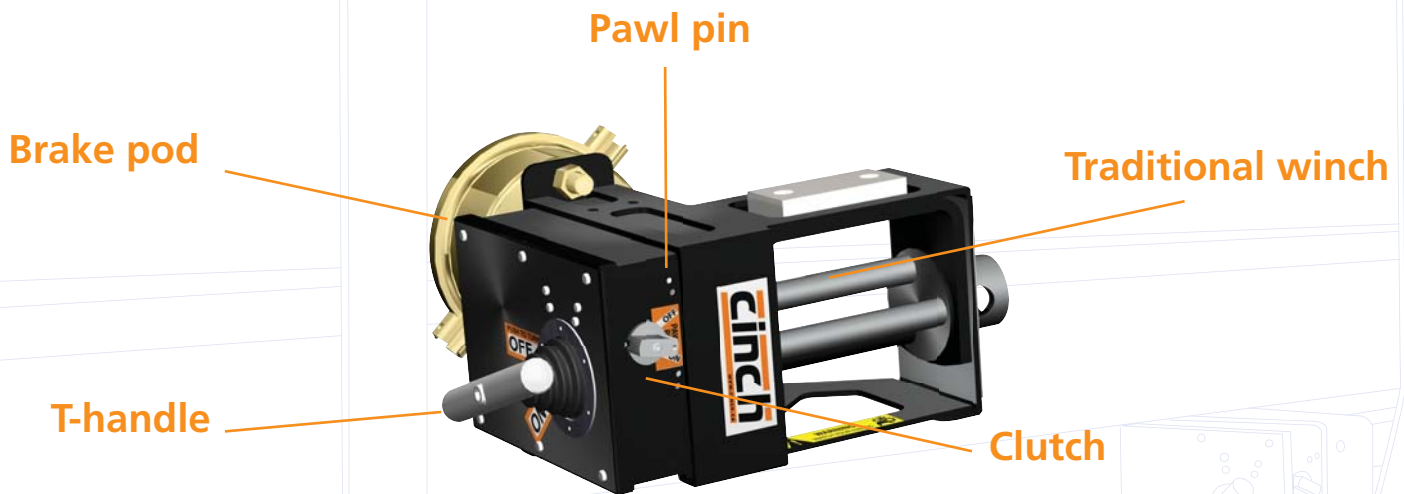

Cinch uses the air system that powers your service brakes and suspension to tighten your straps. Cinch tightens using a patented clutch mechanism and also maintains the strap tension automatically

and continually while you drive. Strap tension can be varied to meet any load requirement by adjusting the air pressure on all units or on each unit individually.*

*Requires individual tension option.

Operating instructions

Engaging the system

1. Turn on air at master control box and select desired air pressure for correct strap tension.
2. Set strap tension at the master control box by setting PSI.
3. Thread the strap through the winch as you would with a standard winch.
4. Turn the pawl pin to the "ON" position.
5. Push in the T-handle and turn to the "ON" position. Pull the T-handle out to lock.
6. The Cinch is now activated and will keep your load secure until released.

Releasing the system

1. Turn the pawl pin to the "OFF" position
2. Push in the T-handle and turn to the "OFF" position. Pull the T-handle out to lock.
3. The Cinch is now released. Remove straps.
4. Turn off the air supply at the master control box when not in use for a significant period of time.

Evolve your cargo securement and switch to the Ultimate Winch today!



Contact us at **1.800.929.2627** or visit us online at www.ancra.com/cinch